



COLOSSEUM PLANK PAVER

INSTALLATION



1. Prepare the Site

Excavate the installation area to approximately 6 in. (152mm) larger on all sides than the actual finished size. Install paver base to a compacted finished thickness of 4 in. (102) for patios and walkways. Lay a 1 in. (25mm) outside diameter pipe on base. Spread 1 in. (25mm) of sand over compacted base. Level the sand by dragging a 2 in. x 4 in. (51mm x 102mm) board over pipe.



2. Lay Stones & Edge Restraint

Lay paving stones in the desired pattern. If the desired pattern requires cutting, the paving stones can be cut with a wet saw.




Install paver restraint edging and spikes around the project, according to the manufacturer's instruction.



3. Sand & Finish

Spread polymeric sand on the installation and sweep into joints, according to manufacturer's instructions. Sweep off any loose sand from project surface.

LAYING PATTERNS

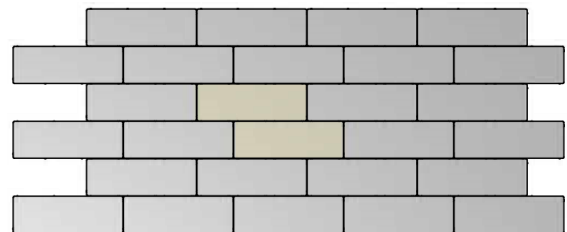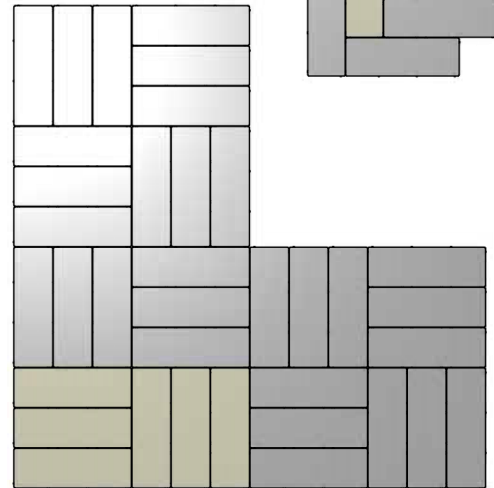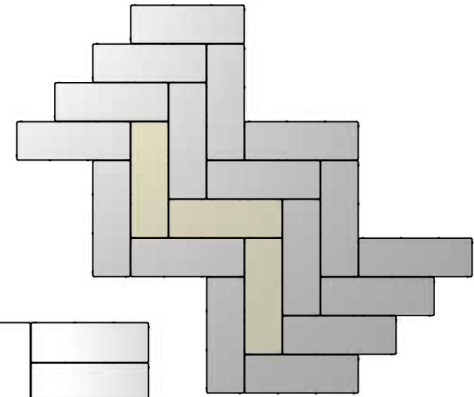

ESTIMATING

Use this chart to estimate the number of units you will need.

	Project Square Feet (length x width)						
	50' (15.2m)	100' (30.5m)	150' (45.7m)	200' (61.0m)	250' (76.2m)	300' (91.4m)	350' (107m)
Units	67	133	200	266	333	390	466